







Installation instructions for P/N :
113956B

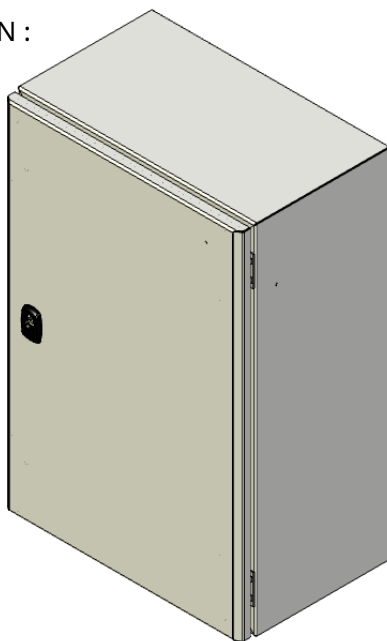

113956B




Mounting 48V-BAT-18Ah-230-400V

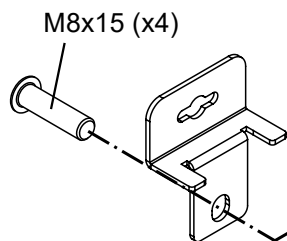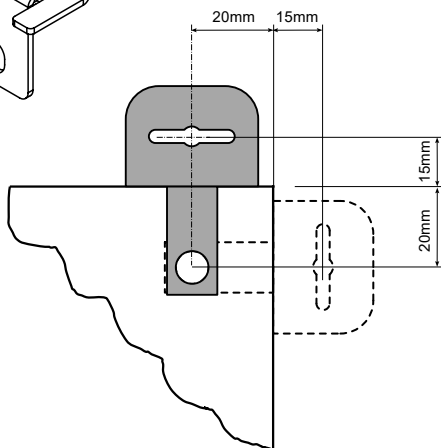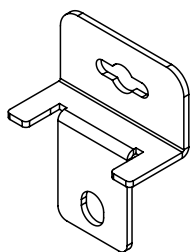

Phillips 3


Overview

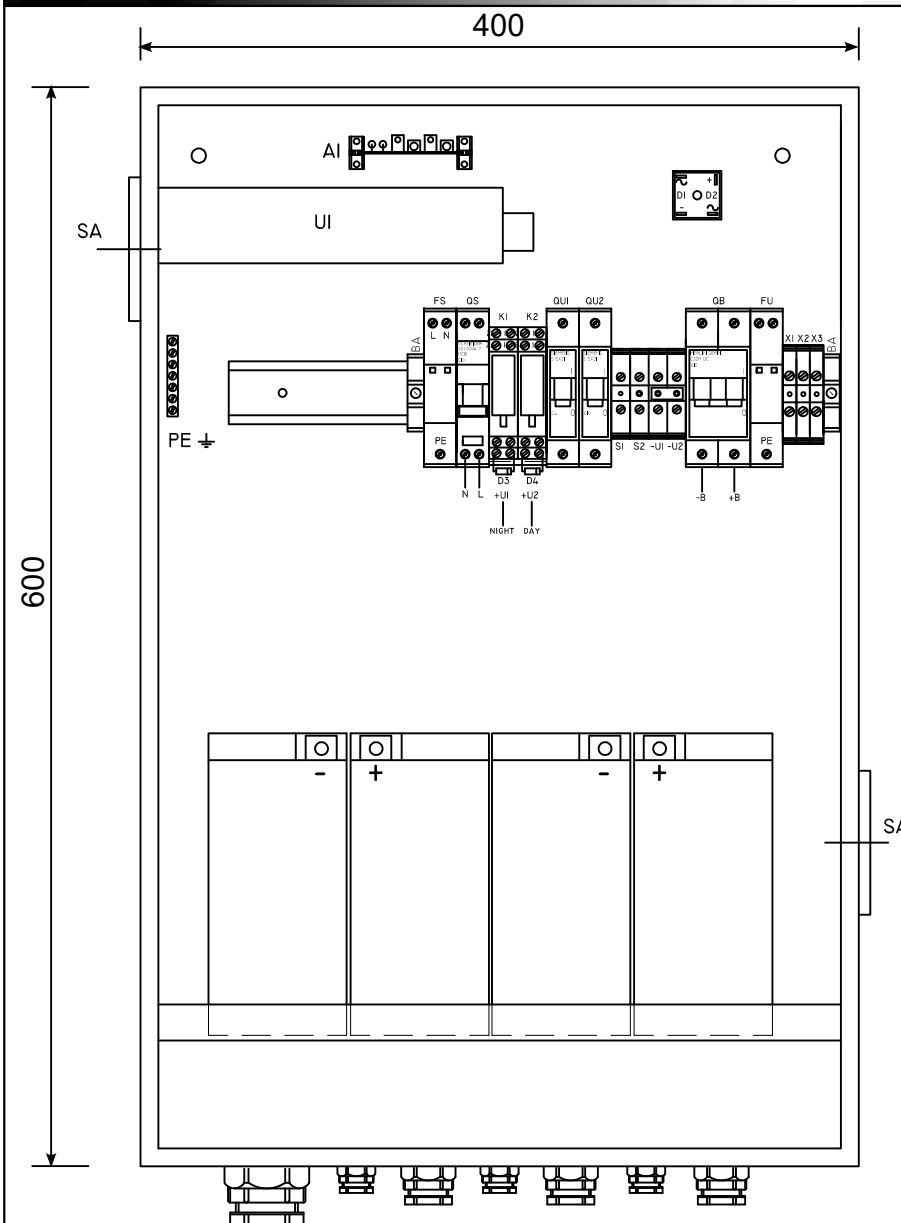

Check voltage between 2 jobs or in case of prolonged storage every 6 months maximum


- If necessary, recharge the batteries until their voltage reaches 13.5V (full battery).
- If battery voltage drops below 11V, replace battery.

Battery connection

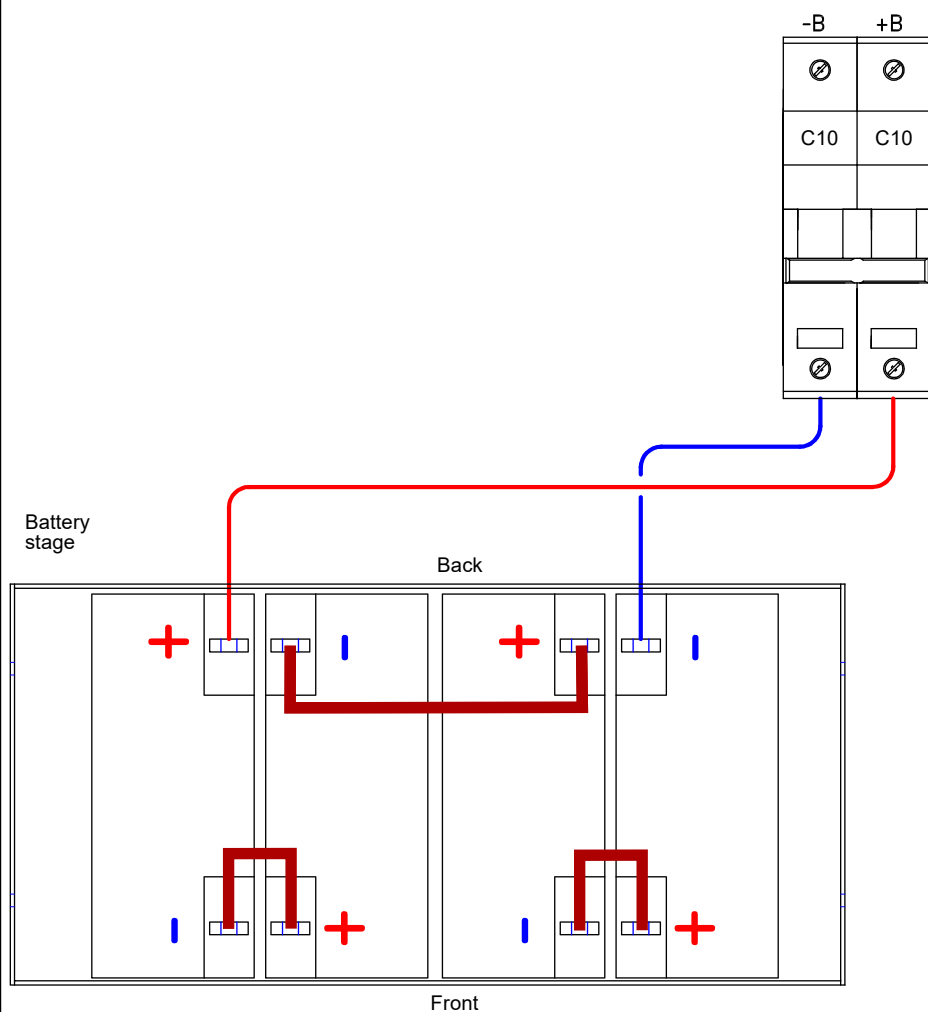


Wiring with the 3 supplied 6mm² wires, to be carried out by the installer


Connection with twilight sensor

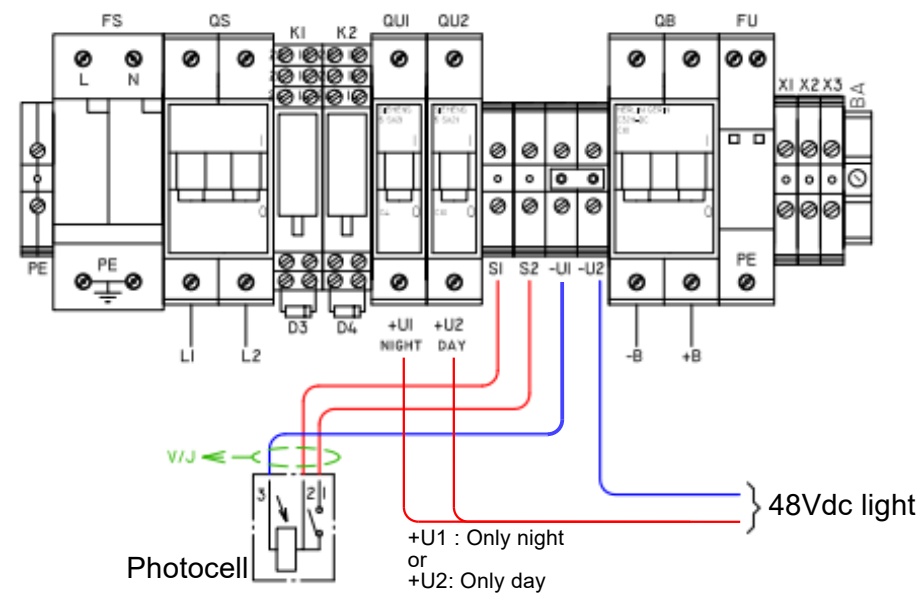


Connection without twilight sensor

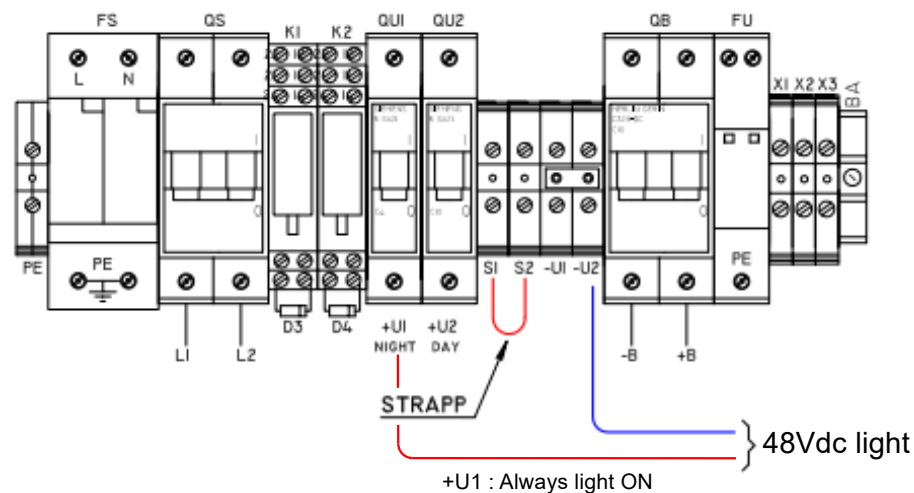


Wiring

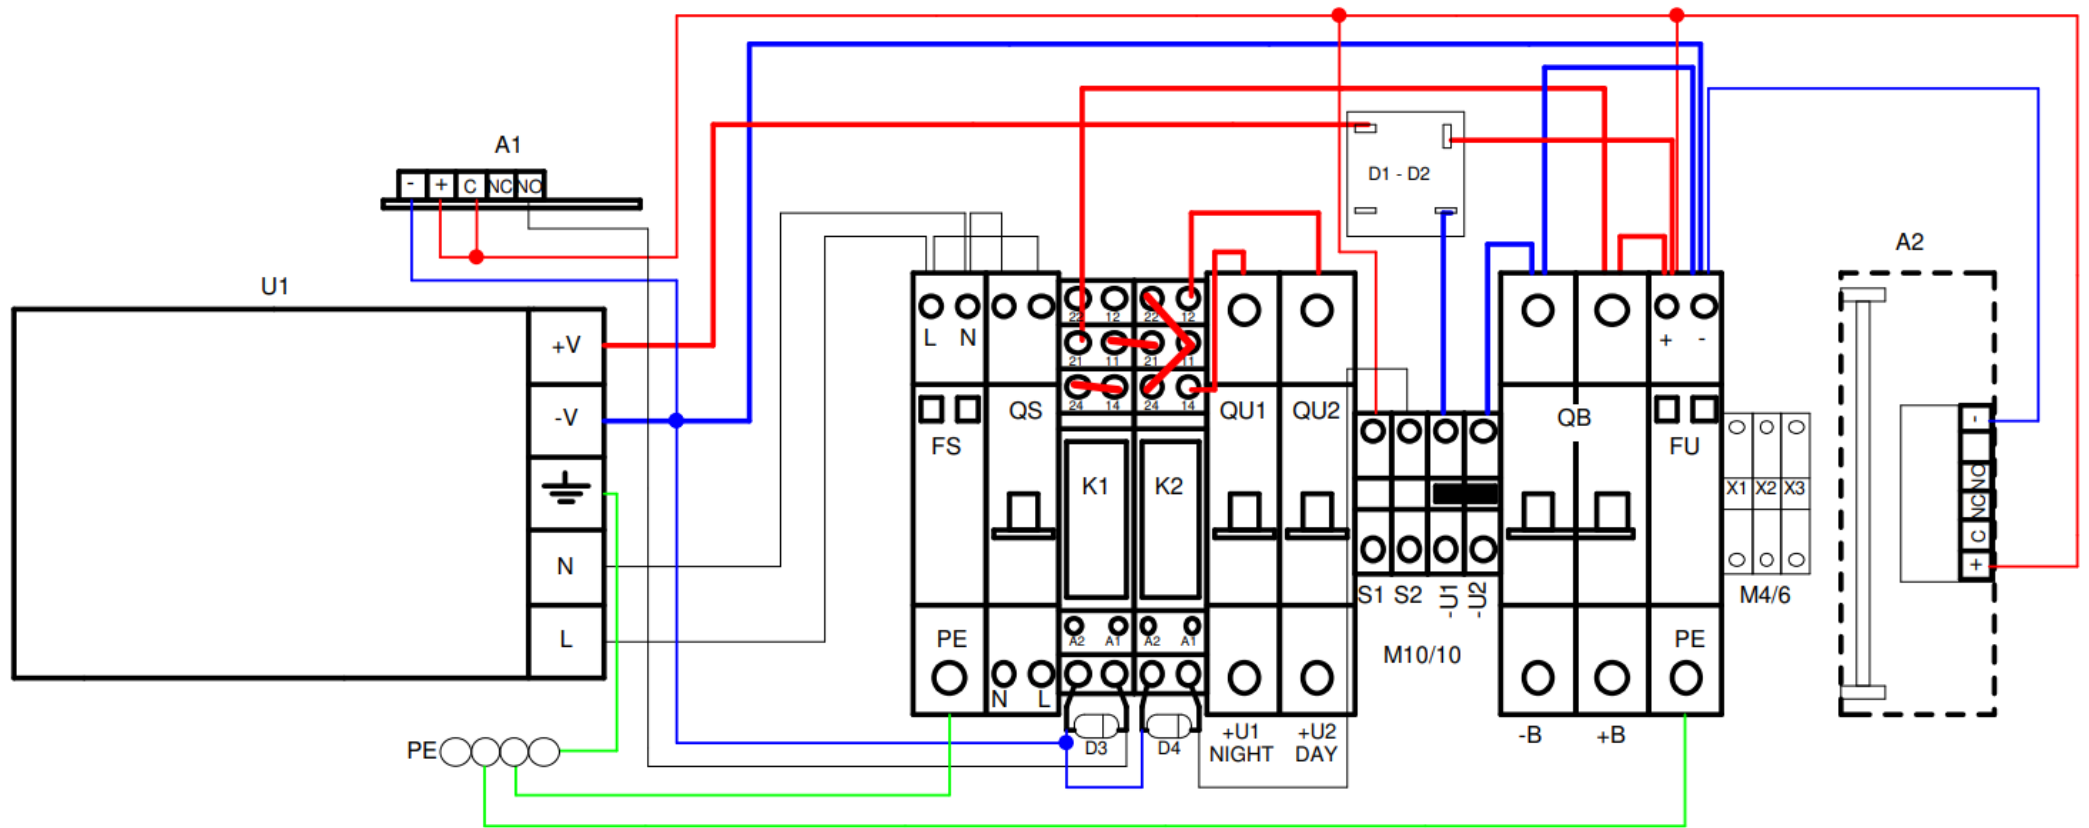

CONTACT NC

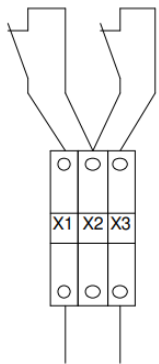

CONTACT NO

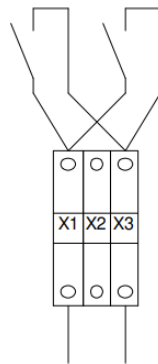

Electrical diagram

